

POC252-1CX-1P FAQ

[POC252-1CX-1P]

How can analog camera co-works with POC252-1CX-1P?

[Answer]

You must connect POC252-1CX-1P to a POC252-1CXP injector device first, or a POC2502-8CXP or POC2502-16CXP. and then connects to separate power and data for your IP camera.

POC252-1CXP-1T FAQ

[POC252-1CXP-1T]

Can I plug in my analog camera to BNC port directly?

[Answer]

No, you can't.

POC252-1CXP-1T BNC port supports POC252-1CX-1P only.

[POC252-1CXP-1T]

My camera is an analog camera and how is co-work with LRP-101CH?

[Answer]

Please connect POC252-1CXP-1T to POC252-1CX-1P and then connects a PoE splitter (ex. POE-302-SP or POE-302-MS) to separate power and data for your analog camera.